

The Keyboard commands

Page 1/8

Summary	Page 1
Capital and small caps	Page 2
Commands using the ⌘ key	Page 3
Other commands	Page 4
Commands for the current view	Page 5
Commands	
Hide management	
Zoom commands	Page 6
Zoom palette	
Zoom commands	
Keyboard commands for snap	Page 7
Main snap	
2D snap	
3D snap	
Snap manager	Page 8

Capital and small caps

<u>Key</u>		<u>Function</u>
A	a	Attachment: switch Right/Center/Left (when creating blocks or openings)
C	c	Center rotation
D	d	Activate/Unactivate dependency
E	⌘ Ctrl E	Edit selection
F	⌘ F	Save (Load) parameters
G	g	Grid On/Off
H	h	Switch Hidden line/Wire frame
I	i	Snap Intersection with WP
K	k	Snap Points on WP
L	l	Snap faces
M	(m)	Move forward (backward) the current selection
N	n	New cursor reference
O	o	Snap on objects in 2D
P	p	Snap on point in 3D
R	⌘ ⇧ R	Redraw
S	s	Snap On/Off
T	(t)	Move WP up (down)
V	v	Vertical projection of the snapped point to the WP
W	w	Show the WP palette
X	x	Snap cross
Y	y	Snap face on WP
Z	z	Projection of the snapped point to the WP

Commands using the ⌘ key

Page 3/8

<u>Command</u>	<u>Function</u>
⌘ A	Select All
⌘ B	Hide selection
⌘ ⌘ B	Invert Hide
⌘ C	Copy
⌘ D	Drawing manager
⌘ E	Zoom Enlarge
⌘ F	Zoom Full page
⌘ G	Group selection
⌘ H	Hide BoA (OS X only)
⌘ ⌘ H	Hide other applications (OS X only)
⌘ I	Isolate selection
⌘ J	Unhide
⌘ L	Layer manager
⌘ N	New3D-2Dfile
⌘ O	Open file
⌘ P	Print
⌘ Q	Quit
⌘ R	Zoom Reduce
⌘ S	Save
⌘ U	Ungroup

<u>Command</u>	<u>Function</u>
⌘ V	Paste
⌘ W	Close window
⌘ X	Cut selection
⌘ Z	Undo
⌘ ⌘ Z	Redo
⌘ ,	Preference manager

Other commands

Page 4/8

Commande

⌘ ⇧ A Esc Esc
Del Suppr

⌘ ⇧ D

⌘ ⇧ N

⌘ ⇧ P

⌘ ⇧ S

⌘ ⌵ A

⌘ ⌵ C

⌘ ⌵ M

⌘ ⌵ N

⌘ ⌵ P

⌘ ⌵ U

⌘ ⌵ W

⌘ Enter

⌘ ⌵ Enter

←

↑

→

↓

⌵ ← ⌵ ↑ ⌵ → ⌵ ↓

Esc

Esc Esc

Esc Esc

Fonction

Deselect all

Delete selection

Update dependency

New layout sheet

Print manager

Save as

Select by criteria

Show cursor palette

Main palette

New window

Preference manager

Utility manager

WP palette

Hide/Show the open palettes

Hide all palettes

Rotations

Current view displacement

Recall the current function

Escape from the current function

Call the selection tool

Commands for the current view

Page 5/8


<u>Command</u>		<u>View</u>
1	⌘ 1	Top view
2	⌘ 2	Section view
3	⌘ 3	Section + elevation view
4	⌘ 4	Axonometric view
5	⌘ 5	Conical view
6	⌘ 6	Last Hidden line view
7	⌘ 7	Last conical view
8	⌘ 8	Palette elevation
0	⌘ 0	OpenGL manager
=	⌘ =	Cut at WP
*	- +	1st, 2nd, 3rd work environment

Hide management

⌘ B	Hide
⌘ ⌘ B	Invert Hide
⌘ I	Isolate selection
⌘ J	Unhide

Zoom commands

Page 6/8

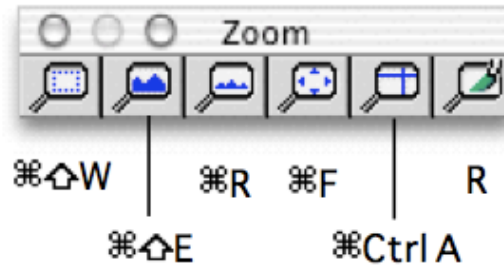

Command

⌘ E >
⌘ F
⌘ R <
⌘ ⇧ E
⌘ ⇧ W
⌘ ⇧ Z
⌘ ⇧ R R
⌘ Ctrl A
⌘ Ctrl D
⌘ Space Space

Zoom

Zoom Enlarge at cursor
Zoom Fit to window
Zoom Reduce
Zoom Enlarge
Zoom Window
Previous Zoom
Redraw
Zoom translation
Default zoom
Zoom at cursor

Keyboard commands for snap

Page 7/8

Main snap

<u>Key</u>	<u>Function</u>	<u>Activate/Unactivate ...</u>
S	Snap	... snap
D	Dependency	... geometric dependency
G	Grid	... grid

2D snap

<u>Key</u>	<u>Function</u>	<u>Snap on ...</u>
K	Points	3D points on WP
I	Edges	Objects edges crossing with WP
Y	Faces	Blocks edges crossing with WP
X	Cross	2D objects crossing with each other in WP
O	2D Objects	Border of 2D objects: circle, arc, segment,, fill, hatching, dimension, region

3D snap

<u>Key</u>	<u>Function</u>	<u>Snap on ...</u>
P	3D Points	3D points of 3D objects
L	Faces	Intersection view line / blocks faces
Z	WP projection	3D snap points projected on WP
V	WP vertical	3D snap points projected vertically on WP

